


# 1/2 " IMPACT WRENCH


## 1/2 " TWIN HAMMER AIR IMPACT WRENCH

Replacement Parts List

Professional duty

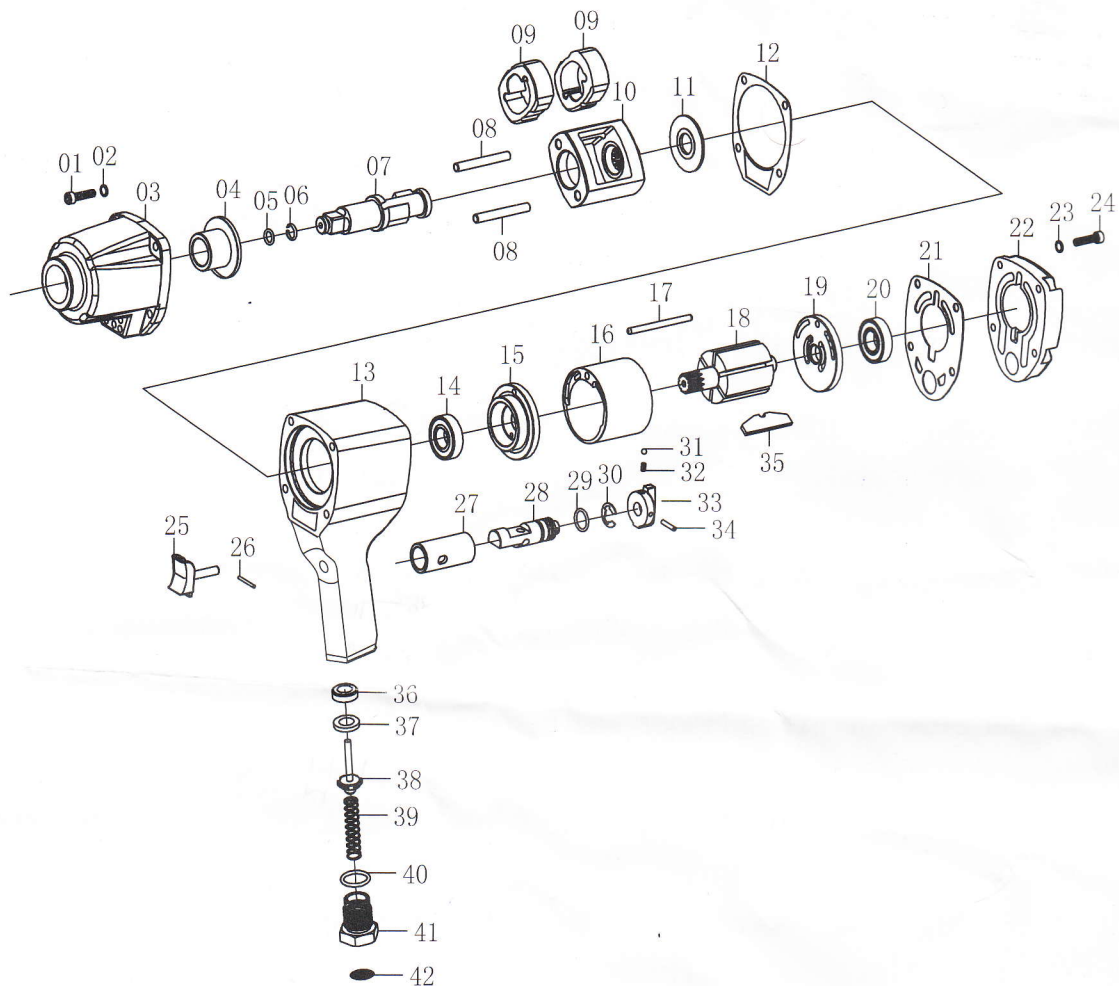

Item No	Part No	Quantity	Item No	Part No	Quantity
01	Hexagon screw	4	22	Rear Cover	1
02	Spring Circle	4	23	Spring Circle	4
03	Front Cover	1	24	Hexagon screw	4
04	Shaft Housing	1	25	Trigger	1
05	O-Ring	1	26	Spring Circle	1
06	Spring Circlip	1	27	Throttle Valve	1
07	Impact Rod	1	28	Throttle Core	1
08	Impact Pin	2	29	O-Ring	1
09	Impact piece	2	30	Circlip	1
10	Impact Frame	1	31	Steel Ball	1
11	Gasket	1	32	Spring	1
12	Front Gasket	1	33	Knob	1
13	Housing	1	34	Spring Circle	1
14	Bearing	1	35	Blade	7
15	Rear Cylinder Cover	1	36	Inlet Rubber Valve Seat	1
16	Cylinder	1	37	Inlet Rubber Valve Seat	1
17	Cylinder Pin	1	38	Air Inlet Valve Lever	1
18	Rotor	1	39	Spring	1
19	Front Cylinder Cover	1	40	O-Ring	1
20	Bearing	1	41	Air Inlet	1
21	Back Gasket	1	42	Filtering Net	1

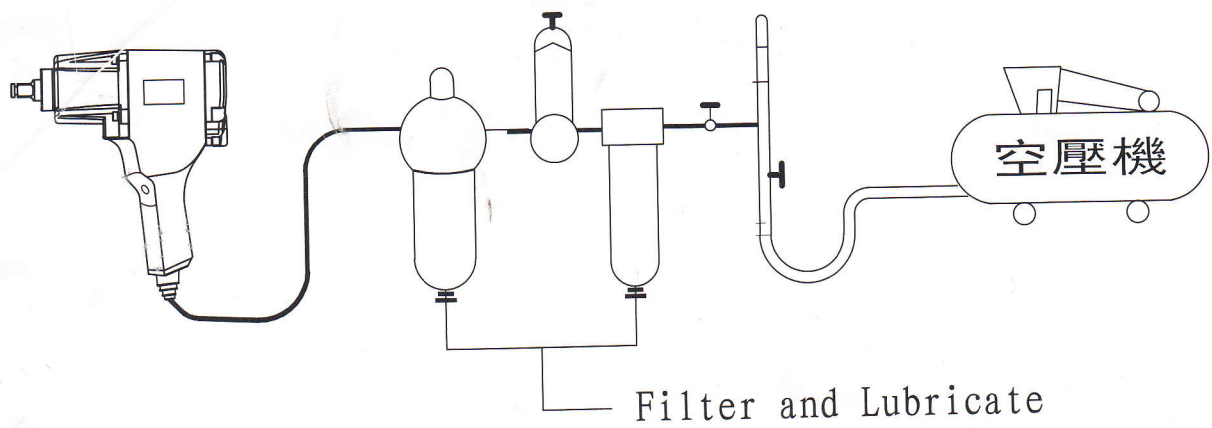

## Safety Regulations/Operation instruction

This Brand Pneumatic Spanner is made of wear-resistant and shockproof materials under excellent design and strict quality control. Notes to the users before operating:

1. Before each shift, lubricate the tool with 3-5 drops of engine oil through air inlet. Don't add the oil with big viscosity, and keep the tool running idly for 1-2 seconds. Otherwise it will reduce the force of air motor.
2. Keep dry and clean of air cylinder and gas container, and be sure that the air supply tube shall not be air leakage.
3. Check to see if the air gauge is at 10KG before use it, safety standard level within 6-8KG of working pressure.
4. In order to keep normal operation of this unit, be sure to fill in the air and water from air outlet of air cylinder, filter, and auto oil filler combination.
5. If no oil filter, please fill oil in according to the assigned oil port. Fill oil in before working to keep the best performance function of this unit.  
(Please use of recommended oil or spindle oil for pneumatic spanner.)
6. If this unit keeps still without running or runs not smoothly, please use of large capacity of special recommended oil or spindle oil to fill in for pneumatic spanner turning. Remove and clean away the dirt and obstacles. If they are unable to be removed after continuous twice or three times, please send them to the dealer for repair or maintenance.
7. In order to protect the tools and extend service life we advise that 3-point combination and air-drying machine should be fixed in pipeline of air compressors.
8. Clean those tools which haven't been used for over half a year and seal them properly with oil.
9. Please put on safety protective glasses when operate.